



Petcove



PurrTek Light

SELF CLEANING LITTER BOX



Hey Friends!

Here at Petcove, we have a clear mission: to enhance pets' well-being with high-quality and inventive products. We offer unique and innovative items, which aim to foster a healthier and more active lifestyle for your pets.

We know you prioritize your companions' health, and we are committed to guarantee our exceptional products. Please register your product within 14 days to activate your exclusive lifetime warranty.

If anything goes wrong with your product, please reach out to us so we can make it right.

+1-844-924-8445 | support@petcoveshop.com | www.petcoveshop.com

The *happy* store for pets!



At Petcove, you can **shop happy**.
We offer innovative products that encourage healthier and more active lifestyles for pets and stand behind our products with a **lifetime warranty!**



+1-844-924-8445 | support@petcoveshop.com

PRODUCT OVERVIEW

Save time in your busy schedule by letting the Petcove PurrTek Light Self-Cleaning Litter Box tackle the cleaning for you! The PurrTek Light uses a simple waste drawer-collection system. Waste is raked directly into the collection bin, keeping it separate from the electronic and mechanical components. This advanced raking action reduces cat litter use and keeps litter fresher for longer. Waste disposal is a snap: open the waste bin, remove the garbage bag, and toss it in the trash.

The automated waste removal and deodorizing cycle ensures the litter box is always clean and fresh, so even the pickiest cats are happy using it. The self-cleaning features let you replace multiple litter boxes with just one PurrTek Light litter box, making it ideal for multi-cat households with up to three cats. Infrared and physical anti-pinch sensors work together to pause the cleaning and deodorizing cycle when your cat enters the litter box, keeping your beloved pet safe. Eliminate odors, save time and money, and keep your cat happy with the PurrTek Light Self-Cleaning Litter Box.

GETTING STARTED


UNPACKING YOUR PETCOVE PURRTEK LIGHT

1. Remove all of the components from the box and inspect each for shipping damage.
2. Carefully read all safety warnings and operating instructions before setting up and using your PurrTek Light Self-Cleaning Litter Box. **Keep this manual for reference.**
3. Complete the steps in the **QUICK & EASY SETUP GUIDE** on page 5 to begin setting up the PurrTek Light Self-Cleaning Litter Box.

Download the Petcove App to manage your PurrTek Light Litter Box, receive notifications, and more!



WHAT'S IN THE BOX

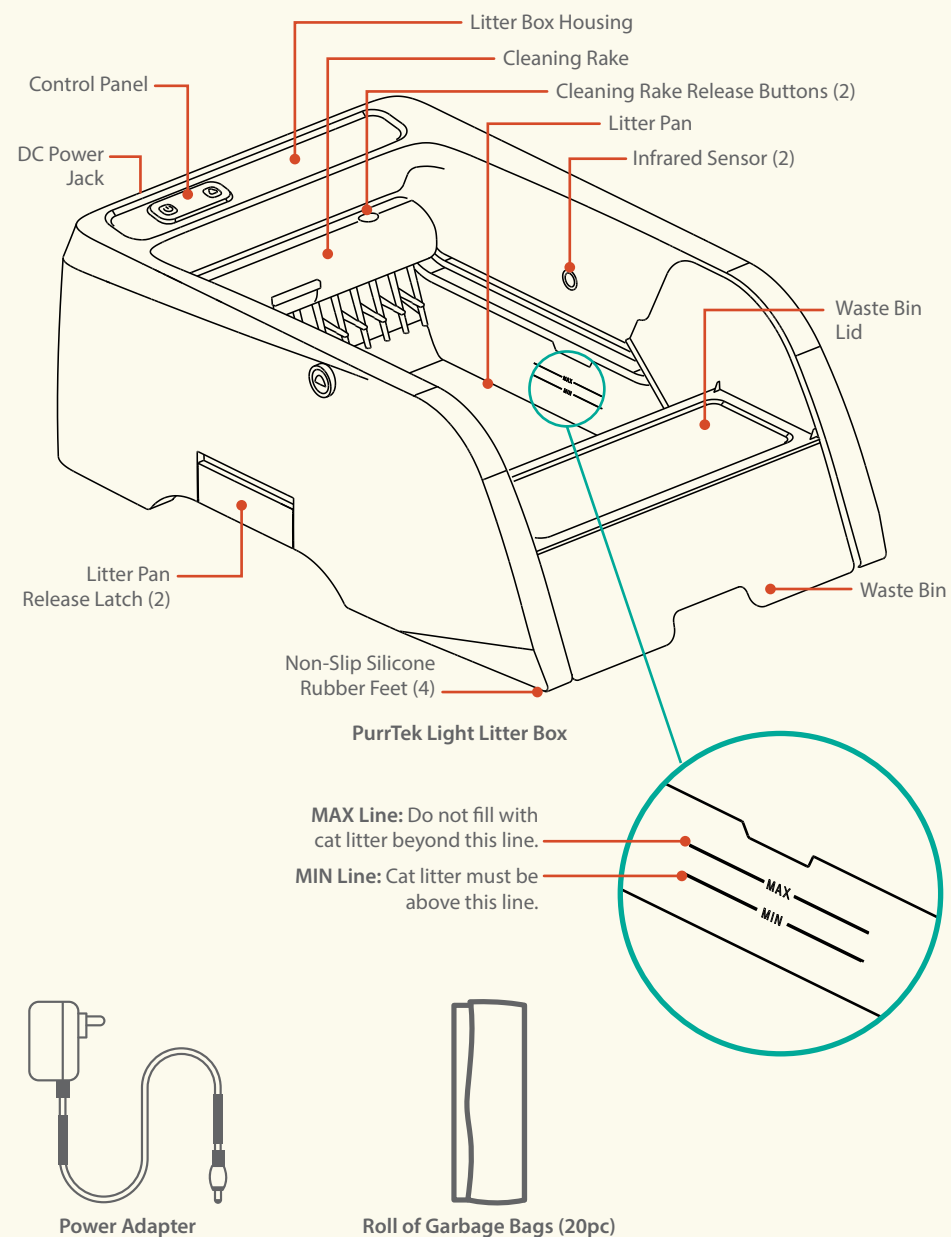

QUICK & EASY SETUP GUIDE

STEP 1: UNPACK AND SET UP

1. Unpack your pre-assembled PurrtTek Light Self-Cleaning Litter Box.
2. Place the litter box on hard, level ground.
3. Slide the waste bin open and insert a garbage bag. Fold the top of the garbage bag down over the edges of the bin.

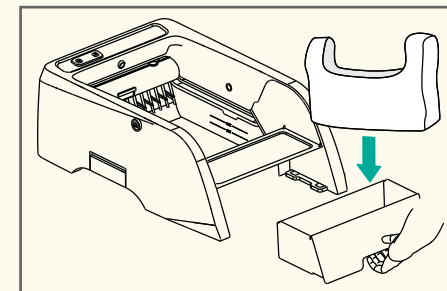


Figure 1

IMPORTANT PLACEMENT NOTES

- ⚠ Do NOT place the litter box on uneven or unstable flooring.
- ⚠ Do NOT place the litter box where the power adapter cable could create a tripping hazard or where pets could chew on the cable.
- ⚠ Keep out of reach of children.

STEP 2: FILL WITH CAT LITTER

1. Notice the MIN and MAX fill lines on the side of the litter pan. See Figure 3.
2. Pour cat litter into the litter pan. Fill above the MIN line but do not exceed the MAX fill line.
3. Use your hand to smooth the cat litter to make sure it falls between the lines. Adjust the amount of litter if needed.

NOTE: Check the litter level daily and add more litter if the amount drops below the MIN fill line.

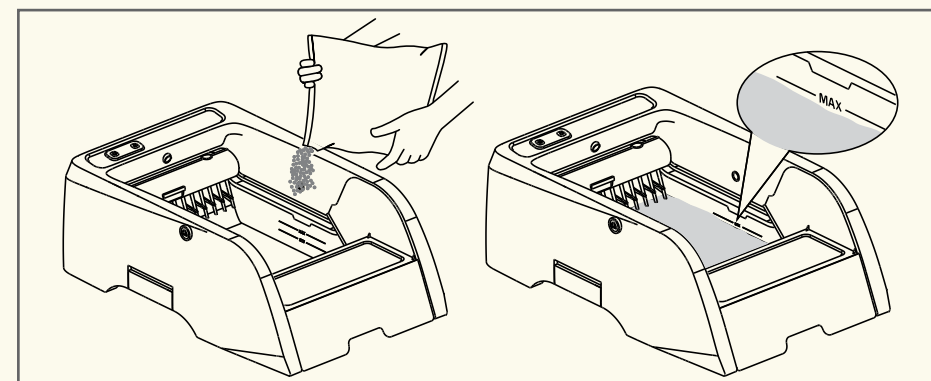


Figure 2

STEP 3: POWER ON THE LITTER BOX

1. Plug the power adapter into the DC power jack below the control panel, then plug the power adapter into a standard electrical outlet.
2. Short press the On/Off Button to turn on the litter box. The power indicator LED will light up.

STEP 4: DOWNLOAD THE APP AND CREATE AN ACCOUNT

1. Scan the QR code to download the Petcove App for free and install it on your smartphone or tablet.
2. Make sure your mobile device is connected to your Wi-Fi network. Please note, the network must be 2.4 GHz; the litter box does not support 5 GHz networks.
3. Open the App, and follow the onscreen prompts to create your free account and customize your notification preferences. NOTE: Check your spam folder if you do not receive your verification email within a few minutes of creating your account.



STEP 5: CONNECT TO THE LITTER BOX

1. Long press the **On/Off Button** to turn on Wi-Fi and connect to your smart device. The Wi-Fi LED will flash to indicate that the Wi-Fi is searching for devices.
2. Tap the yellow **Add icon** in the top-right corner of the home screen. Then, tap **Add Device**. See Figure 3 on the next page.
3. Then, tap the **Add button** at the top of the screen. See Figure 4.
4. Select your 2.4 GHz network, enter the password for your Wi-Fi network, and tap **Next**. See Figure 5.

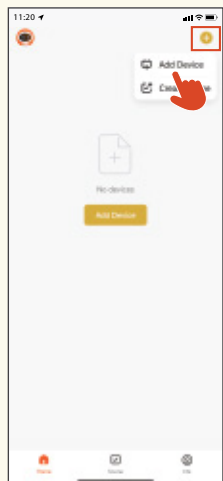


Figure 3

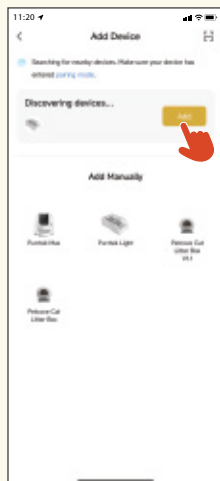


Figure 4



Figure 5

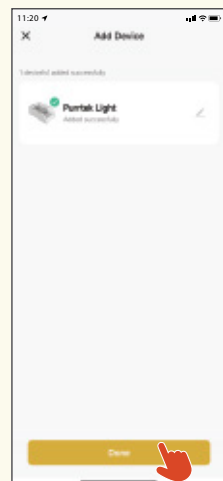


Figure 6

5. When the App is successfully connected to your litter box, the screen will show an image of the PurrTek Light and the message "Added Successfully". Tap the **Done button**. See Figure 6.

TROUBLESHOOTING WI-FI CONNECTIVITY PROBLEMS

If the network configuration fails or a time-out message is displayed, please check the following:

- ⚙ Make sure that Wi-Fi and Location are all enabled on your mobile device.
- ⚙ Make sure the selected Wi-Fi network is 2.4GHz. Ensure your mobile device is also connected to the 2.4G Wi-Fi network. Please note, the litter box does not support 5 GHz networks.

- ⚙ Ensure the Wi-Fi LED on the control panel is flashing to indicate the device is ready to be paired.
- ⚙ Make sure the Wi-Fi network is working. Check to see if other devices can connect to the network.
- ⚙ Check the Wi-Fi signal strength to make sure it is strong.
- ⚙ If the signal is low or there are obstacles between the router and the litter box, try moving the litter box and/or your mobile device closer to the router and try to reconnect.
- ⚙ Check to make sure the Wi-Fi password is correct.
- ⚙ Try moving the device to a location with fewer Wi-Fi signals (too many nearby wireless devices can cause IP address conflicts).
- ⚙ For dual-frequency routers, the network cannot be configured directly. You will need to separate the 2.4 GHz and 5 GHz into separate channels in your router's settings. Then, select the 2.4 GHz channel for the network configuration.

OPERATING INSTRUCTIONS

USING THE CONTROL PANEL




1. **On/Off Button:**
 - a. **Press:** Turn on the litter box. Press a second time to turn off the litter box
 - b. **Press and Hold for 5 seconds:** Turn on the Wi-Fi function to connect the litter box to your mobile device.
2. **Auto-Clean Delay Timer:** Shows the set auto-clean delay, the set number of minutes between when your cat leaves the litter box and the start of the cleaning cycle. When the cat leaves the cat box the timer counts down the time remaining until the cleaning cycle begins.
3. **Start Button:**
 - a. **Press:** Manually run a cleaning cycle. Press a second time to pause the cleaning cycle.
 - b. **Press and Hold for 5 seconds:** Enter the auto-clean delay interface. Then, short press the Start button to toggle through the options, 1, 5, 10, 15, or 20 minutes. The timer will start when your cat leaves the litter box and the auto-cleaning cycle will begin when the timer reaches zero.
4. **Power Indicator LED:** The indicator LED will light up, indicating that the litter box is in standby/working mode. The LED will flash when the auto-clean delay timer starts.
5. **Wi-Fi Indicator LED:** The indicator LED flashes to indicate that the Wi-Fi is searching for devices. It stops blinking and remains lit when the your smart device is connected to the litter box via Wi-Fi. The LED is off when the device is not connected to Wi-Fi.
6. **Pause Indicator LED:** The indicator LED shows "STOP" when a cleaning cycle has been paused.

THE AUTO-CLEANING FEATURE

⚠ WARNING: Do not use auto-cleaning with cats weighing less than 3.3 pounds or under 7 inches in height to avoid injury. Keep the litter box powered off, and only turn it on to manually run a cleaning cycle to clear waste for these pets.



The PurrTek Light's auto-cleaning feature automatically runs a cleaning cycle 1, 2, 5, 10, or 20 minutes after your cat leaves the litter box. This time delay allows the litter to clump properly before the auto-cleaning cycle begins. The infrared sensors on the sides of the box register when your cat leaves the litter box, which triggers the start of the auto-clean delay timer. When the timer reaches zero, the auto-cleaning cycle will begin automatically. The system default auto-clean delay is 1 minute and is displayed on the control panel.

NOTES

- ⚙ The cleaning cycle takes 4 minutes and 30 seconds.
- ⚙ The cleaning cycle uses a built-in negative ion module which emits negative ions that attach to odors and other impurities to neutralize odors.
- ⚙ The infrared sensors on the sides of the litter box sense when your cat enters and leaves the litter box. The cleaning cycle will stop automatically if your cat enters the litter box and will resume as soon as your cat leaves.
- ⚙ Short press the **Start Button**  at any time during the cleaning cycle to pause it. Press a second time to resume the cleaning cycle.

CHANGING THE AUTO-CLEAN DELAY


The system default auto-clean delay is 1 minute. You may increase the auto-clean delay to meet your specific needs:

1. Press and hold the **Start Button**  for 5 seconds to enter the time selection interface. The auto-clean delay timer (00:00) will flash.
2. Short press the **Start Button**  to toggle through the time options, 1, 5, 10, 15, and 20 minutes. Your selection is shown on the control panel.
3. After 3 seconds of inactivity, the timer will stop flashing and your selection will be saved.

To change the auto-clean delay in the App:

1. On the App control screen, select **Delayed Cleaning Settings**. See *Figure 10*, on page 10
2. Follow the App prompts to set the do not disturb schedule.

NOTES

- ⚙ We recommend extending the auto-clean delay time if your cat has soft stools or diarrhea to give the litter plenty of time to clump and to avoid waste sticking to the inside of the litter pan.
- ⚙ If you wish to turn off auto-cleaning mode (for example when acclimating your cat to the litter box), simply short press the **On/Off Button**  on the control panel to turn off the litter box.

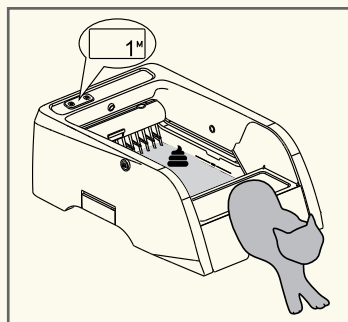


Figure 7

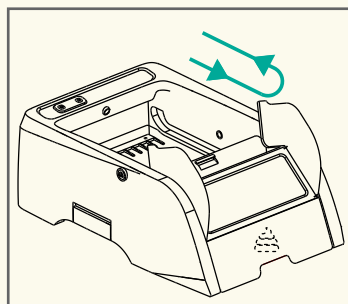



Figure 8

MANUALLY RUNNING A CLEANING CYCLE

You may manually run a cleaning cycle to clear waste from the litter box at any time:

1. Short press the **Start Button**  on the control panel or tap the **One Click Cleaning button** in the App.
2. The litter box will immediately run a cleaning cycle.

CHANGING THE GARBAGE BAG

Regularly check the waste bin and replace the garbage bag when the bin is full:

1. Slide the waste bin out, and remove and dispose of the used garbage bag.
2. Remove a new garbage bag from the roll and shake it to open it. Be careful not to tear it.
3. Insert the new garbage bag, folding the top of the bag over the edges of the bin to prevent debris from leaking into the bin.
4. Slide the waste bin closed.

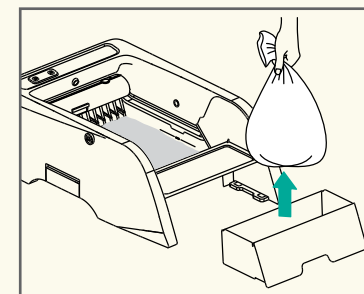


Figure 9

NOTES

- ⚙ Always properly dispose of used cat litter in the trash. Avoid handling used cat litter to avoid potential cross-contamination or exposure to pathogens. Pregnant women should never handle the litter box, litter, or waste.
- ⚙ How often you change the garbage bag will depend on the number of cats in the home and the ambient temperature (odors worsen with heat and humidity). We recommend changing it at least once every 5 days.
- ⚙ The waste bin can hold up to 7 days' worth of waste for one cat.

ADDING CAT LITTER

1. Pour cat litter into the litter pan.
2. Smooth the cat litter with your hand or the cleaning rake to make sure it falls between the MIN and MAX fill lines. Adjust the amount as needed.

NOTE: Check litter level daily and add more litter as needed.

REPLACING THE CAT LITTER

1. Turn off the litter box and unplug the power adapter.
2. Lift the release latches on either side of the device to release the litter pan. Set the litter box housing aside.
3. Empty the soiled cat litter into a garbage bag and dispose in the trash.
4. Pour new cat litter into the litter pan
5. Smooth the cat litter with your hand to make sure it falls between the MIN and MAX fill lines. Adjust the amount as needed.

NOTES

- ⚙️ Change the litter regularly to manage odors. We recommend replacing it at least every 15–30 days.
- ⚙️ We strongly recommend cleaning the litter pan every time you replace the cat litter. This will help prevent the accumulation of odors. See **CLEANING INSTRUCTIONS** on page 11.
- ⚙️ Always properly dispose of used cat litter in the trash. Avoid handling used cat litter to avoid potential cross-contamination or exposure to pathogens.

HOW THE ANTI-PINCH SAFETY SENSOR WORKS

The PurrTek Light has dual safety features to protect your beloved pet:

- ⚙️ When the cleaning rake is moving forward, infrared sensors monitor the area in front of the rake. If the sensors sense an object, the cleaning rake will stop.
- ⚙️ The back side of the cleaning rake has a physical anti-pinch sensor. When the cleaning rake is moving backward, if an object hits the cleaning rake, the rake will change directions to move away from the object.

USING THE PETCOVE APP

THE CONTROL SCREEN

The App control screen has the following features (see *Figures 10, 11, and 12*):

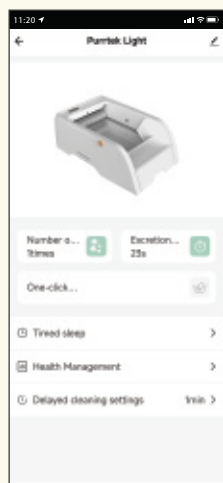


Figure 10

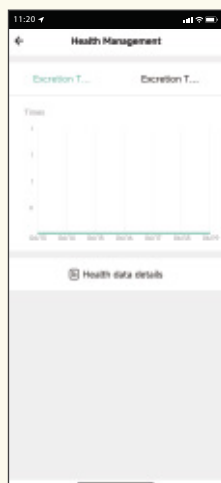


Figure 11

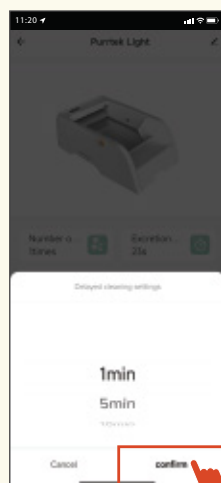


Figure 12

1. **Litter Box Name:** Tap the edit icon to edit the name.
2. **Number of Visits (X times):** Tap to see the number of visits to the litter box in the last 24 hours.
3. **Excretion Time (X s):** Tap to see the length of the last litter box visit.
4. **One Click Cleaning Button:** Tap to begin a cleaning cycle. Tap a second time to pause.
5. **Timed Sleep:** Tap to set a do not disturb schedule. The litter box will not auto clean during the set schedule.

6. **Health Management:** Tap to see the number of visits in the past 24 hours, the duration of each visit, and other health data.
7. **Delayed Cleaning Settings:** Tap to set the auto cleaning delay to 1, 5, 10, 15, or 20 minutes. The default auto-clean delay is 1 minute.

CLEANING INSTRUCTIONS

⚠️ WARNINGS

- ⚙️ Do not allow water or other liquids to come into contact with the housing which contains the electronic components. Do not soak or immerse the housing in water or other liquids.
- ⚙️ Always disconnect the power before cleaning or moving the litter box to avoid electric shock.

CLEANING THE LITTER BOX

1. Remove the cleaning rake:
 - a. Short press the **Start button** (triangle icon) to begin a cleaning cycle.
 - b. Wait a few seconds, then press the **Start button** (triangle icon) a second time to pause the movement of the cleaning rake.
 - c. Press the release button on either side of the cleaning rake to remove it. See *Figure 13*.
2. Turn the litter box off and unplug the power adapter.
3. Lift the release latches on either side of the device to release the litter pan. Lift the litter box housing (upper portion with the control panel) and set it aside. See *Figure 14*.
4. Remove the waste bin and the waste bin lid:
 - a. Slide the waste bin out and set it aside.
 - b. Grab the inside edge of the waste bin lid. Lift, rotating it toward you until it slides out. See *Figure 15*.
5. Vacuum the litter pan, cleaning rake, and waste bin and lid to remove any debris. Then wash each in warm, soapy water. As needed, soak in warm soapy water for 15–20 minutes to remove stuck-on debris.
6. Rinse each component and allow it to dry completely before reassembling the litter box.
7. Wipe the litter box housing with a clean dry cloth.
8. Wipe the infrared sensors with a slightly damp cloth to remove any dust or debris.
9. When all components are dry, complete steps 1–4 in reverse order to reassemble the litter box.

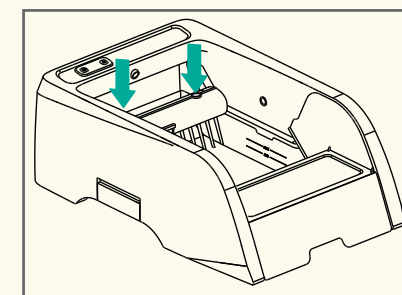


Figure 13

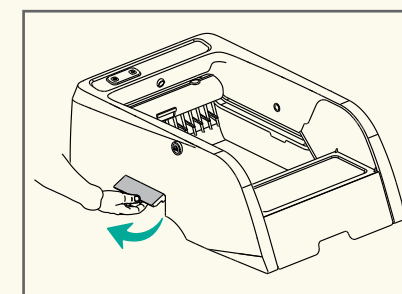


Figure 14

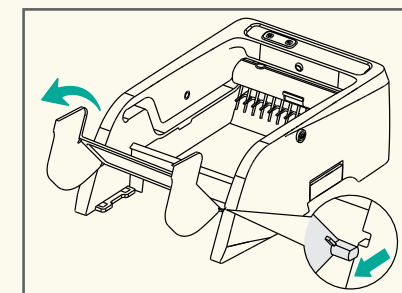


Figure 15

CLEANING NOTES

- ☀ Regularly wipe the infrared sensors with a clean dry cloth to remove dust and debris that may impede proper function.
- ☀ Regularly wash all washable parts (litter pan, pedal, waste collection bucket, and cleaning rake) in warm soapy water to maintain a hygienic environment for your cat and manage odors.
- ☀ Cleaning the litter box regularly will keep odors under control. We recommend cleaning it every time you change the cat litter—every 15–30 days.
- ☀ The litter pan may also be cleaned with antibacterial wipes or isopropyl alcohol.
- ☀ Only use mild soap or detergent. Do not use harsh detergents or abrasive, corrosive, solvent, or chemical cleaners to clean the litter box as they may damage the components.
- ☀ We recommend choosing safe, cat-friendly cleaning solutions to avoid chemicals that could be harmful to humans or pets.

KEEPING THE LITTER BOX SMELLING FRESH AND CLEAN

- ☀ Check the litter level daily and add fresh litter when needed.
- ☀ Empty the waste bin regularly.
- ☀ Empty the waste bin more frequently in warm weather when odors worsen with heat and humidity.
- ☀ Wipe down the inside of the waste bin in the event of garbage bag breakage or leakage.
- ☀ Change litter regularly. We recommend replacing it every 15–30 days. How often you change the litter will depend on several factors including, the number of cats in your household, the quality and type of litter you're using, any changes in stool consistency, and your (and your pet's) tolerance to odors.
- ☀ Regularly clean the litter pan. We recommend washing it every time you change the litter. Regular cleaning will help minimize odor accumulation and maintain a hygienic environment for your pet.
- ☀ Wash the litter pan more frequently if your cat is experiencing soft stools or diarrhea.
- ☀ Be sure the litter box area is well-ventilated to help naturally dissipate odors.
- ☀ You may add baking soda or activated charcoal to the litter tray to reduce odors if desired. While these additives will not clog the device, other additives may—so please do not use any other additives.
- ☀ Do not use additives or cleaners containing acetone or that are very alkaline as these types of products can dissolve or corrode plastics.
- ☀ We recommend avoiding the use of scented cat litter or garbage bags. Cats have a very sensitive sense of smell, and artificial fragrances can cause your cat discomfort or distress and may even lead to litter box aversion, especially when used in a small enclosed space.
- ☀ Always store cat litter in a cool, dry location away from direct sunlight and moisture.

TIPS FOR USE

- ☀ Carefully read through all safety warnings before using and follow all usage instructions.
- ☀ Not for cats with mobility problems due to illness or aging.
- ☀ Do not use auto-cleaning with cats weighing less than 3.3 pounds or under 7 inches in height to avoid injury. Keep the litter box powered off, and only turn it on to manually run a cleaning cycle to clear waste for these pets.

- ☀ This litter box is not designed for cats over 33 pounds.
- ☀ This litter box might not be right for you if:
 - ☀ Is an elderly cat. In addition to mobility problems, elderly cats may have reduced vision or cognitive decline which may make it difficult for them to avoid the cleaning rake.
 - ☀ Your pet is anxious or easily startled. These cats may be started by the noises or movements of the litter box.
 - ☀ Your pet has digestive or other health issues resulting in diarrhea or soft stools. Soft stools may have more difficulty clumping, resulting in more hands-on cleanup of the litter pan.

HELPING YOUR CAT ACCLIMATE TO THE LITTER BOX

- ☀ Unpack the litter box from the box and leave it and the packaging out for your cat to smell and get used to before setting it up.
- ☀ Ideally, you should place the litter box in the same location as your old litter box and make sure it faces in the same direction.
- ☀ Make sure that the location is quiet, well-ventilated, and away from busy areas. Avoid placing the litter box in noisy, high-traffic areas.
- ☀ Leave the old litter box set up next to the litter box for several days or weeks to allow your cat to choose which one they would prefer to use. You may find the transition is a gradual one, but it is important to allow your pet to make that decision on their terms.
- ☀ Place some waste from the old litter box into the litter box to help your cat understand that the litter box is their new litter box.
- ☀ Praise and reward your cat with cuddles or treats every time they use the litter box to build positive associations with it.
- ☀ Go slow and be patient. Never force your cat to use the litter box. This will only result in hurt feelings and may even further deter your cat from using the litter box.
- ☀ Use the litter box for several days or weeks with the power off to allow your cat to get used to the enclosed space before adding the noise and movement of the cleaning mechanisms.
 - ☀ The noises the litter box makes can be upsetting or frightening for some cats.
 - ☀ Try turning the litter box on and running a manual-cleaning cycle after your cat has done their business and is still in the same room (but not right next to the litter box).
 - ☀ Once your cat is more comfortable using the litter box and is using it regularly, try turning the power on and letting it run through its cleaning cycle right after they use it and monitor how they react.
- ☀ Once you've begun using the litter box with the power on, monitor your cat carefully for signs of distress, anxiety, pain, or other issues.
- ☀ If turning on the power causes distress or negative reactions, turn the power off and go back to running manual-cleaning cycles.
- ☀ If possible, use the same type of litter you used in the previous litter box. Sudden changes in litter scent or texture could discourage your cat from using the litter box.
- ☀ If you previously used a different kind of litter than you will use with your PurrTek Light, try putting some of the new litter in the old litter box. Add a bit more and more over several days until the old litter box is full of the new cat litter.

- ⚙ Do not get rid of the old litter box too soon or you may find that your pet has accidents on the floor rather than using the litter box. If this happens, don't scold your cat, as this can reinforce their distrust or fear of the litter box. Wait until your cat has been successfully using the litter box for several weeks before removing the old one.
- ⚙ If you have multiple cats wait until all cats are consistently using the litter box before taking away the old litter box.
- ⚙ If your cat likes catnip or other treats, try placing some catnip or a treat at the entrance of the litter box to encourage them to go inside.
- ⚙ Stop cleaning the old litter box to make it less appealing to your cat.
- ⚙ Try moving the old litter box to a more undesirable location.
- ⚙ How long it takes your cat to adjust to the litter box will depend on their personality. Some will begin to use it right away, though most will take several days or weeks to start trying it out. Picky cats will require lots of patience and consistent use of the above tips for several weeks.
- ⚙ If you're encountering challenges or have concerns about your cat's use of the litter box, consult with your veterinarian for guidance and advice.

CHOOSING AN APPROPRIATE CAT LITTER

- ⚙ Using inappropriate litter can clog, damage, or break the device. Do NOT use:
 - ⚙ Non-clumping or loose-clumping litter.
 - ⚙ Do not use pellet-style litter as the pellets are too large to fit through the tines of the cleaning rake.
 - ⚙ High-dust litter, as dust can interfere with the electronics of the litter box.
- ⚙ Choose quick-clumping litter, such as bentonite clay litter, so waste does not stick to the bottom of the litter pan.
- ⚙ Choose high-quality cat litter as it clumps better, breaks apart less, has superior odor absorption, and lasts longer than cheap, low-quality litter.
- ⚙ Always make sure the litter is at an appropriate level, above the MIN fill line and below the MAX fill line, to keep the litter box operating properly.

PRACTICING GOOD HYGIENE

- ⚙ Always properly dispose of used cat litter in the trash. Avoid handling used cat litter to avoid potential cross-contamination or exposure to pathogens. Pregnant women should never handle the litter box, litter, or waste.
- ⚙ Always practice good hygiene. Wash your hands thoroughly after handling the litter box or coming into contact with litter or waste.
- ⚙ Consider wearing a mask when emptying or cleaning the litter box to reduce your exposure to cat litter dust, allergens, and other potential irritants, particularly if you have allergies or respiratory sensitivities.

TROUBLESHOOTING GUIDE

Quickly troubleshoot simple issues you might experience with your Petcove PurrTek Light using the table below. Please contact a customer support representative for additional assistance at 844-924-8445 or support@petcoveshop.com. Please do not attempt to repair the product.

ISSUE	POSSIBLE REASON	HOW TO RESOLVE
The litter box is not working	The litter box is not turned on.	Plug the power adapter into the litter box and then into an electrical outlet.
	One of the infrared sensors is blocked	Wipe the infrared sensors on the sides of the litter box with a soft dry cloth.
	The motor has failed.	Please contact a customer support representative.
The display shows "E0"	The motor torque-load is exceeded.	Check to make sure that the amount of cat litter in the litter pan does not exceed the MAX fill line. Remove some cat litter if needed.
	The cleaning-rake track or litter box is blocked by a large clump of waste	Check for blockages and large clumps of waste and remove if found. After removing, unplug the power adapter and then plug it back in to reset the litter box.
The cleaning rake stops or does not return to the home position	The anti-pinch mechanism is stuck.	Turn off and unplug the device. Lift the levers on the sides of the housing to release the litter pan. Lift the housing, turn it upside down, and gently shake it over a garbage bin to release any debris stuck in the anti-pinch sensor.
	The cleaning-rake track or litter box is blocked by a large clump of waste	Check for blockages and large clumps of waste and remove if found. After removing, unplug the power adapter and then plug it back in to reset the litter box.
Strange noises during operation	There is debris stuck in the cleaning-rake track.	Remove the cleaning rake and clean the track to remove any debris.
Waste is sticking to the cleaning rake or the sides or bottom of the litter pan.	Cat litter is not clumping properly	Replace low-quality cat litter with high-quality, quick-clumping cat litter.
	The auto-clean delay may be too short (not allowing enough time for the litter to clump before the cleaning cycle begins).	Increase the auto-clean delay.



At Petcove, you can **shop happy**. We offer innovative products that encourage healthier and more active lifestyles for pets and stand behind our products with a **lifetime warranty!**

+1-844-924-8445 | support@petcoveshop.com

SAFETY INSTRUCTIONS

Keep this manual in a safe place for future reference.

Before using this product, read all safety warnings and operating instructions. Failure to do so may result in serious injury or death, or damage to the product or property.

CONTRAINDICATIONS

- ⚠ This product is only intended for use with cats. Do not use with other animals.
- ⚠ Do not use this product if your cat has mobility problems due to illness or aging.
- ⚠ Do not use this product with cats over 33 pounds:
- ⚠ Do not use the auto-cleaning feature of this product (keep the litter box powered off, and only turn it on to manually run a cleaning cycle to clear waste), if your cat weighs less than 3.3 pounds or is under 7 inches in height.
- ⚠ Consult with your veterinarian before using this product if your cat:
 - ⚠ Is under the care of a veterinarian for a pre-existing health condition.
 - ⚠ Is a senior or geriatric cat.
 - ⚠ Has seizures.
 - ⚠ Has recently had surgery or is recovering from injury.
 - ⚠ Has a pacemaker or other electronic medical device.
 - ⚠ Has a heart condition, such as heart disease, arrhythmia, or heart defects.


DISCLAIMER

- ⚠ Use this product only as instructed in this manual.
- ⚠ The use of this product is entirely at the user's discretion. Please read all instructions and safety information carefully before using this product. We assume no responsibility and expressly disclaim any and all liability for personal injury, pet injury, death, or property damage or loss sustained through improper use, failure to follow the instructions and warnings in this manual, improper setup, neglect, or inadequate or improper maintenance of this product.
- ⚠ It is the responsibility of the owner to ensure that all users of this product are adequately informed of all warnings and cautions.

Warning:

CHOKING HAZARD - Small Parts.

Not for children under 3 years.

 **WARNING:** This product can expose you to chemicals which are known to the State of California to cause cancer, birth defects, or other reproductive harm. Go to www.P65Warnings.ca.gov for more information.

WARNING

To reduce the risk of serious injury or death or damage to the product or property:

- ⚠ To ensure proper setup, use, and maintenance of the product, it is important to carefully read and adhere to the instructions provided in the installation and user manual.

- ⚠ This product is intended for cats only. Do not use this product with other animals or humans.
- ⚠ Do not use auto-cleaning with cats weighing less than 3.3 pounds or under 7 inches in height to avoid injury. Keep the litter box powered off, and only turn it on to manually run a cleaning cycle to clear waste for these pets.
- ⚠ This product is not intended for use by children. Children may not operate this product without close, responsible adult supervision.
- ⚠ Do not allow children to play inside or around the product. Do not allow children to handle, move, or clean the product. This product is not a toy.
- ⚠ This product is not intended for operation by people with diminished mental, sensory, or physical capacity unless closely supervised by a responsible adult.
- ⚠ Keep hands, hair, and clothing away from moving parts to avoid injury.
- ⚠ If you are not sure that this product is right for your cat, please talk to your veterinarian or a certified trainer.
- ⚠ It is very important to closely supervise your cat's interaction with the product. Be vigilant for any signs of distress, anxiety, pain, or other issues related to its use. Immediate action should be taken if any problems arise.
- ⚠ Never force your cat to use the litter box.
- ⚠ Never place anything in the litter pan other than clumping cat litter.
- ⚠ Do NOT place the product on uneven or unstable flooring.
- ⚠ Never use the product on or near stairs, steps, inclines, hills, or other sloped surfaces.
- ⚠ Do not drag, drop, or set the product on the floor forcefully to avoid damaging it.
- ⚠ Do not sit, stand, or place objects on top of the product.
- ⚠ Do not place objects on the device or rest any object against the device.
- ⚠ Always properly dispose of used cat litter in the trash. Avoid handling used cat litter to avoid potential cross-contamination or exposure to pathogens. Pregnant women should never handle the litter box, litter, or waste.
- ⚠ Always practice good hygiene. Wash your hands thoroughly after handling the litter box or coming into contact with litter or waste.
- ⚠ Consider using a mask to reduce your exposure to dust, allergens, and other potential irritants, particularly if you have allergies or respiratory sensitivities. Emptying and cleaning the litter box can generate dust and allergens.

ELECTRICAL WARNINGS

To reduce the risk of burns, fire, electric shock, serious injury or death, or damage to the product or property:

- ⚠ Only use the provided power adapter at the specified voltage to power the product. Using a power adapter other than the one provided may result in damage to the product, a fire, or an explosion.
- ⚠ Do not use the provided power adapter to power other products.
- ⚠ Use this product in a cool, dry location. Do not use or store the product in direct sunlight.
- ⚠ Keep the product away from fire, flammable or explosive items or chemicals. Do not operate in the presence of aerosol (spray) products or corrosive gases, or where concentrated oxygen is administered.
- ⚠ Do not attempt to disassemble, modify, or tamper with the product.

- ⚠ Only use the provided accessories with the product.
- ⚠ Do not expose the control panel or electrical components to water or other liquids. Do not soak or immerse the litter box housing (including the control panel) in water or other liquids. If the control panel or electrical components become wet, unplug, and do not use. Do not use the product outdoors, in high-moisture environments, or in any place where the product may become wet. This product is for indoor use only. If the electrical components become wet, unplug the product and do not use it.
- ⚠ Do not plug in or unplug the power adapter with wet hands.
- ⚠ Do not use during lightning and thunderstorms. Always unplug the power adapter during thunderstorms. Turn off the system immediately in the event of a power outage.
- ⚠ Do not use with an extension cord.
- ⚠ Do not allow pets to chew on the power adapter cable to avoid the risk of electric shock. Always keep the power adapter cable out of reach of children and pets.
- ⚠ Do not place where the power cable could create a tripping hazard.
- ⚠ Always disconnect the power before removing the litter pan or cleaning or moving the product.
- ⚠ Do not modify, tamper with, or damage the power adapter. Never bend, tie, pull, or twist the power adapter cable. Never unplug the adapter by pulling on the cable. Never use a damaged or modified power adapter to power the device.
- ⚠ Keep sharp objects away from the product and power adapter.
- ⚠ Regularly inspect the product including the infrared sensors for damage, cracks, loose components, or electrical issues. Do not use the product if it has been dropped, if it is damaged or malfunctioning, or if the electronics have been exposed to water.
- ⚠ Regularly inspect the power adapter and cable for signs of damage, wear, or fraying. Do not use if damaged or worn.

STORAGE AND MAINTENANCE

- ⚠ **WARNING:** Do not attempt to disassemble, modify, or repair the product to avoid damaging the safety features of this product. This product contains no user-serviceable parts.
- ⚠ Store the product in a cool, dry, indoor location out of reach of children and pets. Do not store in direct sunlight.
 - ⚠ Unplug the power adapter before storing.
 - ⚠ Always empty and thoroughly clean and dry the litter box before storing.
 - ⚠ Do not store objects on top of the product.

NOTICE

- ⚠ Excessive force or weight applied to the product can crush or damage it.
- ⚠ Long-term UV exposure can cause the plastic to fade or degrade.
- ⚠ This product is intended for in-home use only. Do not use in commercial, rental, institutional, or therapeutic settings.
- ⚠ Dispose of the product and all accessories according to state and federal regulations.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



PRODUCT SPECIFICATIONS

UNIT SPECS

Dimensions: 29.06"W × 18.11"D × 9.84"H
Net Weight: 14.1 lbs.
Waste Bin Capacity: 1.3 Gallon
Litter Capacity: 1.3 Gallon
Maximum Cat Weight: 33 lbs.
Decibel Rating: ≤45 dB
Rated Power: ≤7V A
Standby Power: ≤0.5V A
Power Adapter Input: AC 100–240V
Power Adapter Output: DC 12V–1A

Wi-Fi Bandwidth: 2.4G (5G Not Supported)
Garbage Bag Size: 1.2 Gallon
Max Relative Humidity (Use & Storage): ≤93%
Operating Temperature: 41–104°F
Storage Temperature: -4–140°F
Materials: ABS
Certifications: CE, RoHS, FCC, PSE, IEC60335-1 UL (power adapter)

MADE IN CHINA

Petcove

The *happy* store for pets!

